

#### User Guide

#### BLE / Wi-Fi / Zigbee Gateway ISGW-BZ31-WH





PM-ISGW-UG V20230801

#### BLE / Wi-Fi / Zigbee Gateway ISGW-BZ31-WH



#### BLE / Wi-Fi / Zigbee Gateway What's in the box?



#### BLE / Wi-Fi / Zigbee Gateway

#### BLE / Wi-Fi / Zigbee Gateway Controls and Indicators



#### BLE / Wi-Fi / Zigbee Gateway Dimensions



# BLE / Wi-Fi / Zigbee Gateway Specifications

Communication Protocol	BLE Wi-Fi Zigbee	Bluetooth Wireless Wireless Personal Area Network
Protocol Specs	BLE Wi-Fi Zigbee	4.2 IEEE 802.15.4 2.4G IEEE 802.11n 3.0 IEEE 802.15.4
Power Input	110~220V	
Read Range	55' w/clear line of sight 20' through 2 walls	
Operating Temperature	14°F to 122°F	

#### Power Over Ethernet (POE) Gateway ISGW-BP22-SP-WH



#### Power Over Ethernet (POE) Gateway What's in the box?



#### BLE / Wi-Fi Gateway





Ethernet Cable

#### Power Over Ethernet (POE) Gateway Controls and Indicators



### Power Over Ethernet (POE) Gateway Dimensions



### Power Over Ethernet (POE) Gateway Specifications

Туре	BLE-POE Power Over Ethernet	
Power Input	DC 5V 1A	
Communication Method	Wi-Fi, Ethernet Bluetooth Mesh	
Read Range	25'~30'	
Working Humidity	10% to 90% RH (no condensation)	
Operating Temperature	-4°F to 113°F	
Storage Temperature	41°F to 113°F	





From the Lock Screen, tap the Settings icon in the bottom right corner of the screen.





To add a gateway, tap the "+" icon in the bottom right corner of the screen.





Choose "Auto Detect" to search for available devices.





The screen will automatically populate with all available Bluetooth devices.

Tap the gateway that you would like to pair with the App and a green check mark will appear. Tap Confirm.





**Connecting by Wi-Fi:** Select a 2.4Ghz network. Enter the network password and tap Confirm.

No password is required for a hardwired POE gateway.

\*Note: the gateways are not compatible with 5Ghz networks.



= Inox Q
1 F St. Loft 🛩
When pairing with a POE Gateway, the WFI Password is NOT required.
When pairing with a WFI Gateway, make sure this phone is connected to a 2.4GHz WFI network. Select the WFI
If pairing with a WFI gateway, please enter the correct network password. If pairing with a POE gateway, please press the Continue button.
Password field is blank
Cancel Continue
and the second se
Cancel
·

If the password field is left blank when connecting to an iOS device, an additional screen is shown as a reminder that connecting by Wi-Fi requires a password.

Tap Cancel to go back and enter a

Wi-Fi password, or Confirm if connecting to a POE gateway.





Enter a name for the gateway in the Device Name field If there is a firmware update available, the Device Update field will show "Available." Tap "Available" to update the firmware. Tap Confirm to complete the pairing process.





The gateway will appear in the list of devices that are paired with the App for this door.

# Use the QR code below for additional support, or visit **InoxSmart.com**

