




Template for ISM-PD9500 (2-1/2" Backset) Smart Mortise Lock With XGT/XGS Lever and Sectional Reader

Case Size: 3-3/8" x 6" x 11/16" (86mm x 152mm x 17mm)

Backset: 2-1/2" (63.5mm)

Lock Front: 1" x 8" x 7/32" (25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

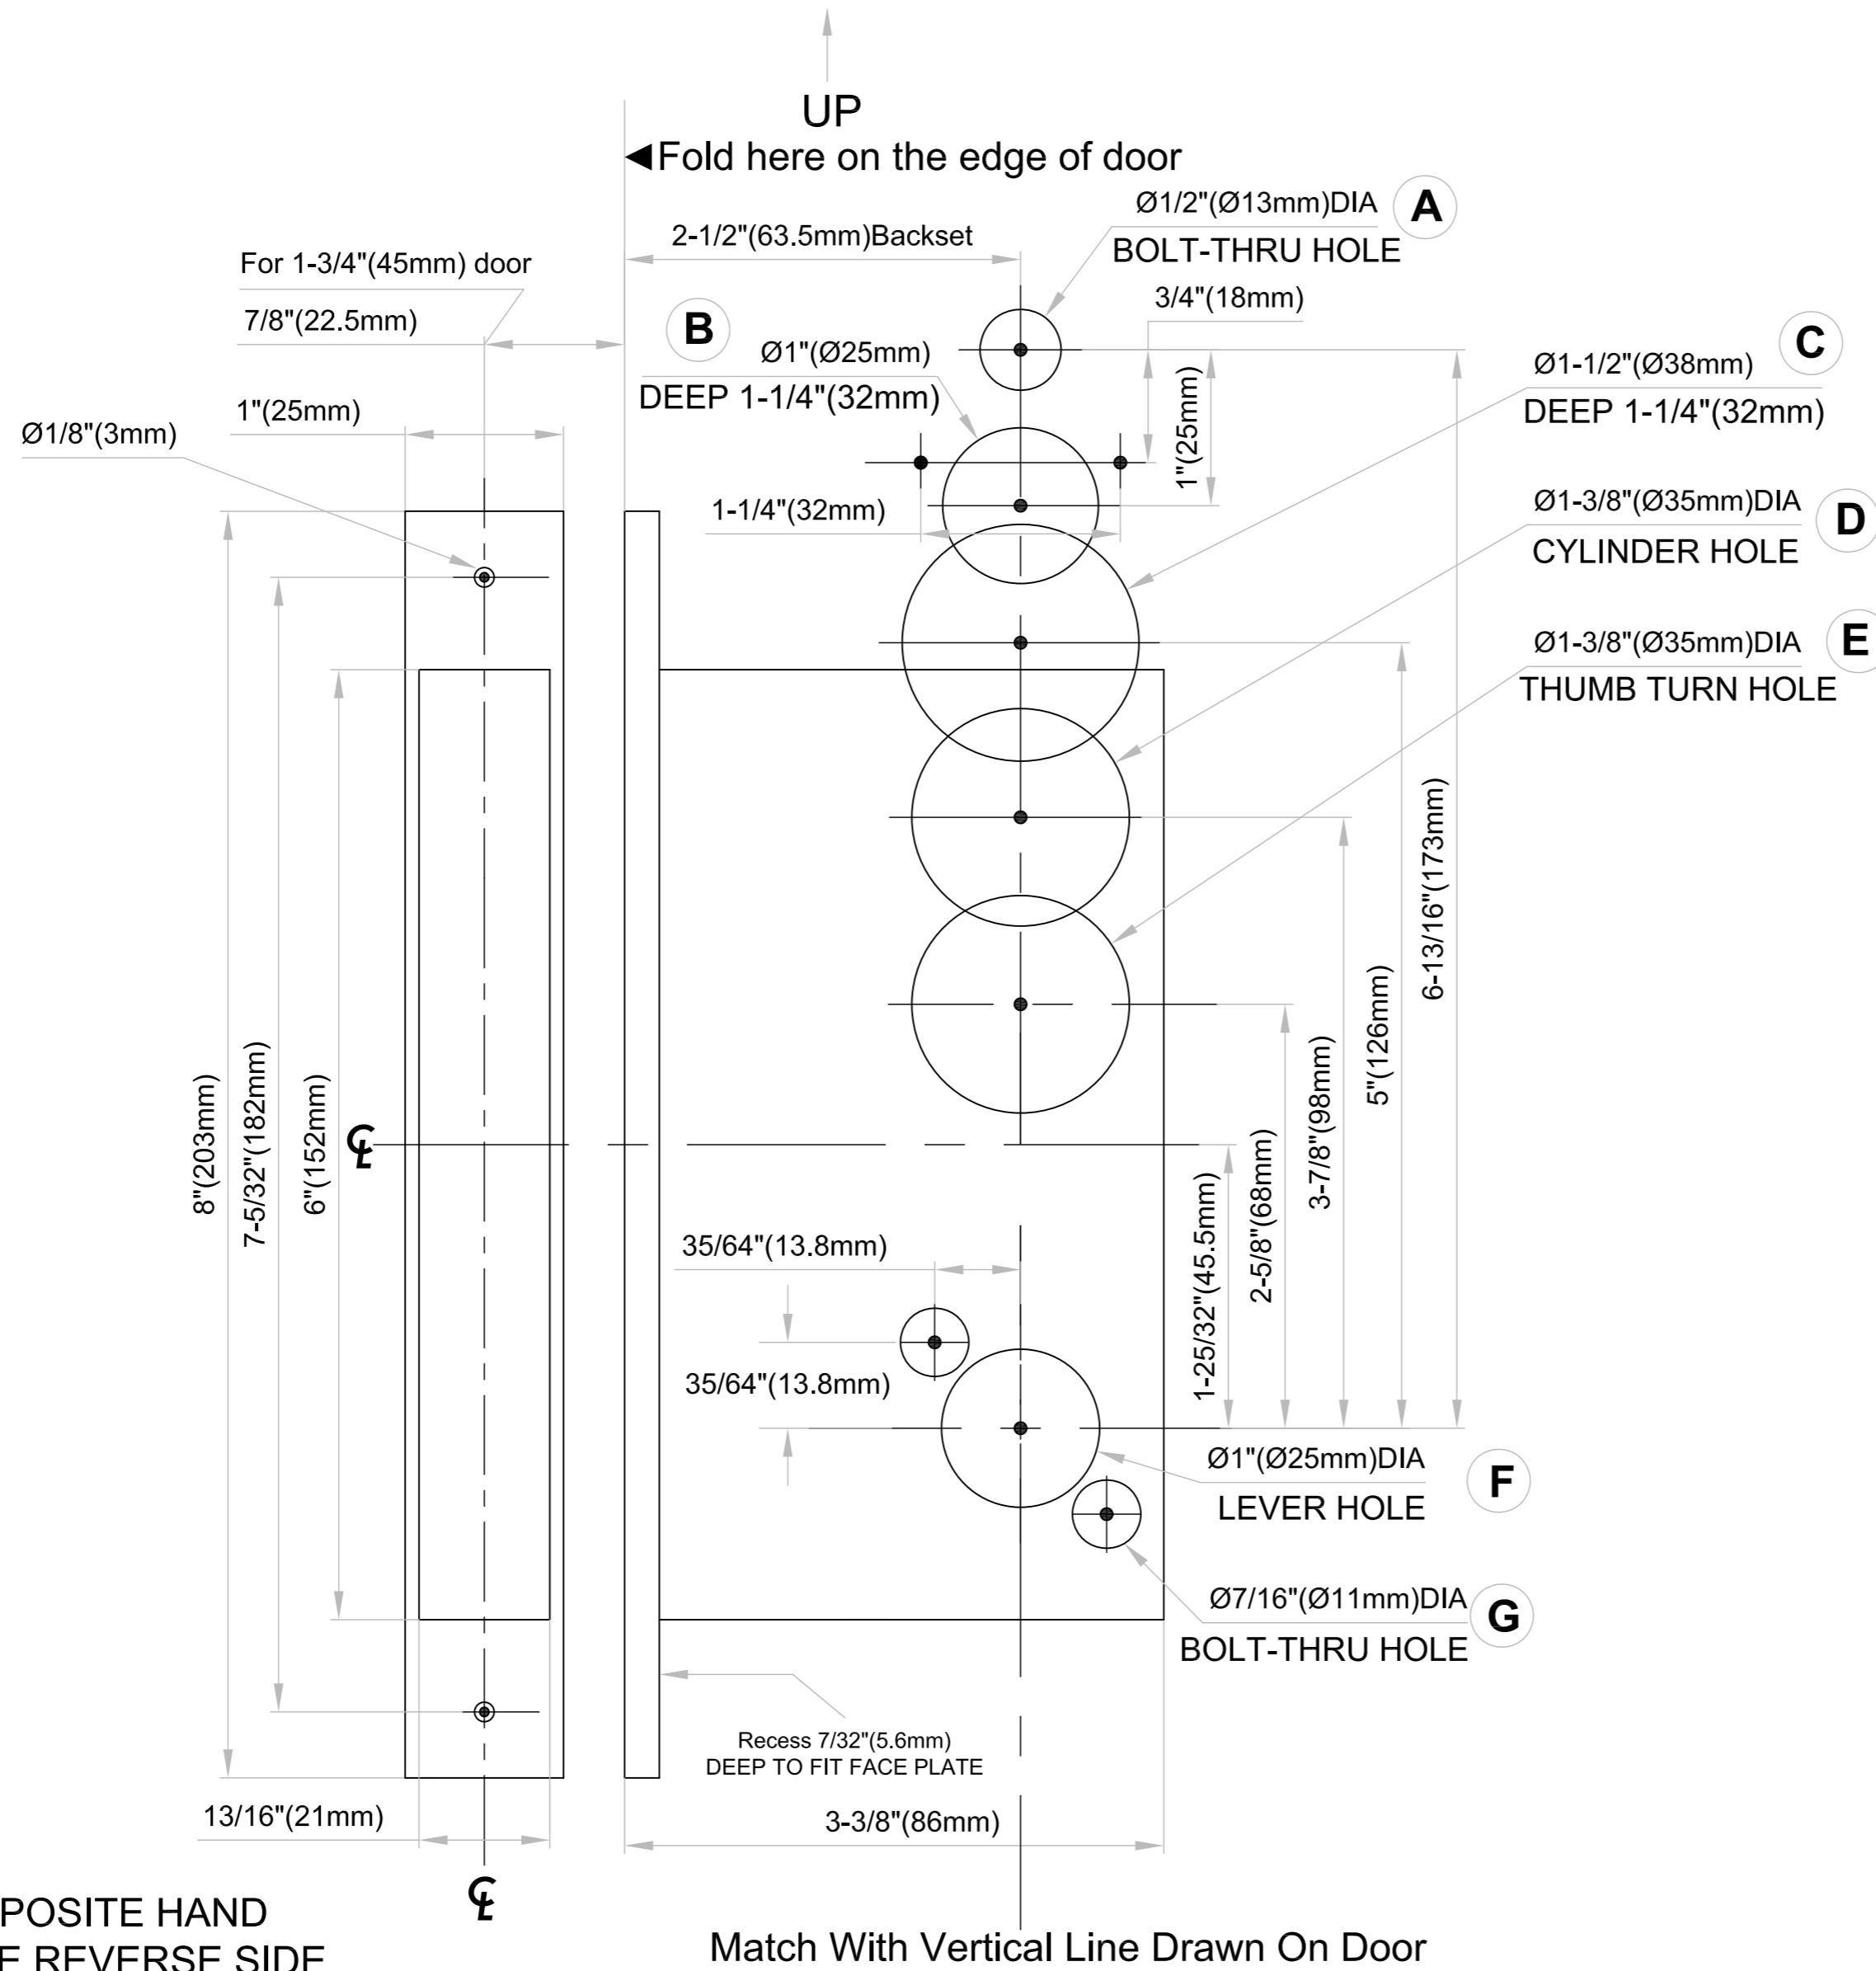

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes							Inside Holes												
		A	B	C	D	E	F	G	A	B	C	D	E	F	G						
Entry	...PD9550...	●	●				●														




Template for ISM-PD9500 (2-1/2" Backset) Smart Mortise Lock With XGT/XGS Lever and Sectional Reader

Case Size: 3-3/8" x 6" x 11/16"(86mm x 152mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

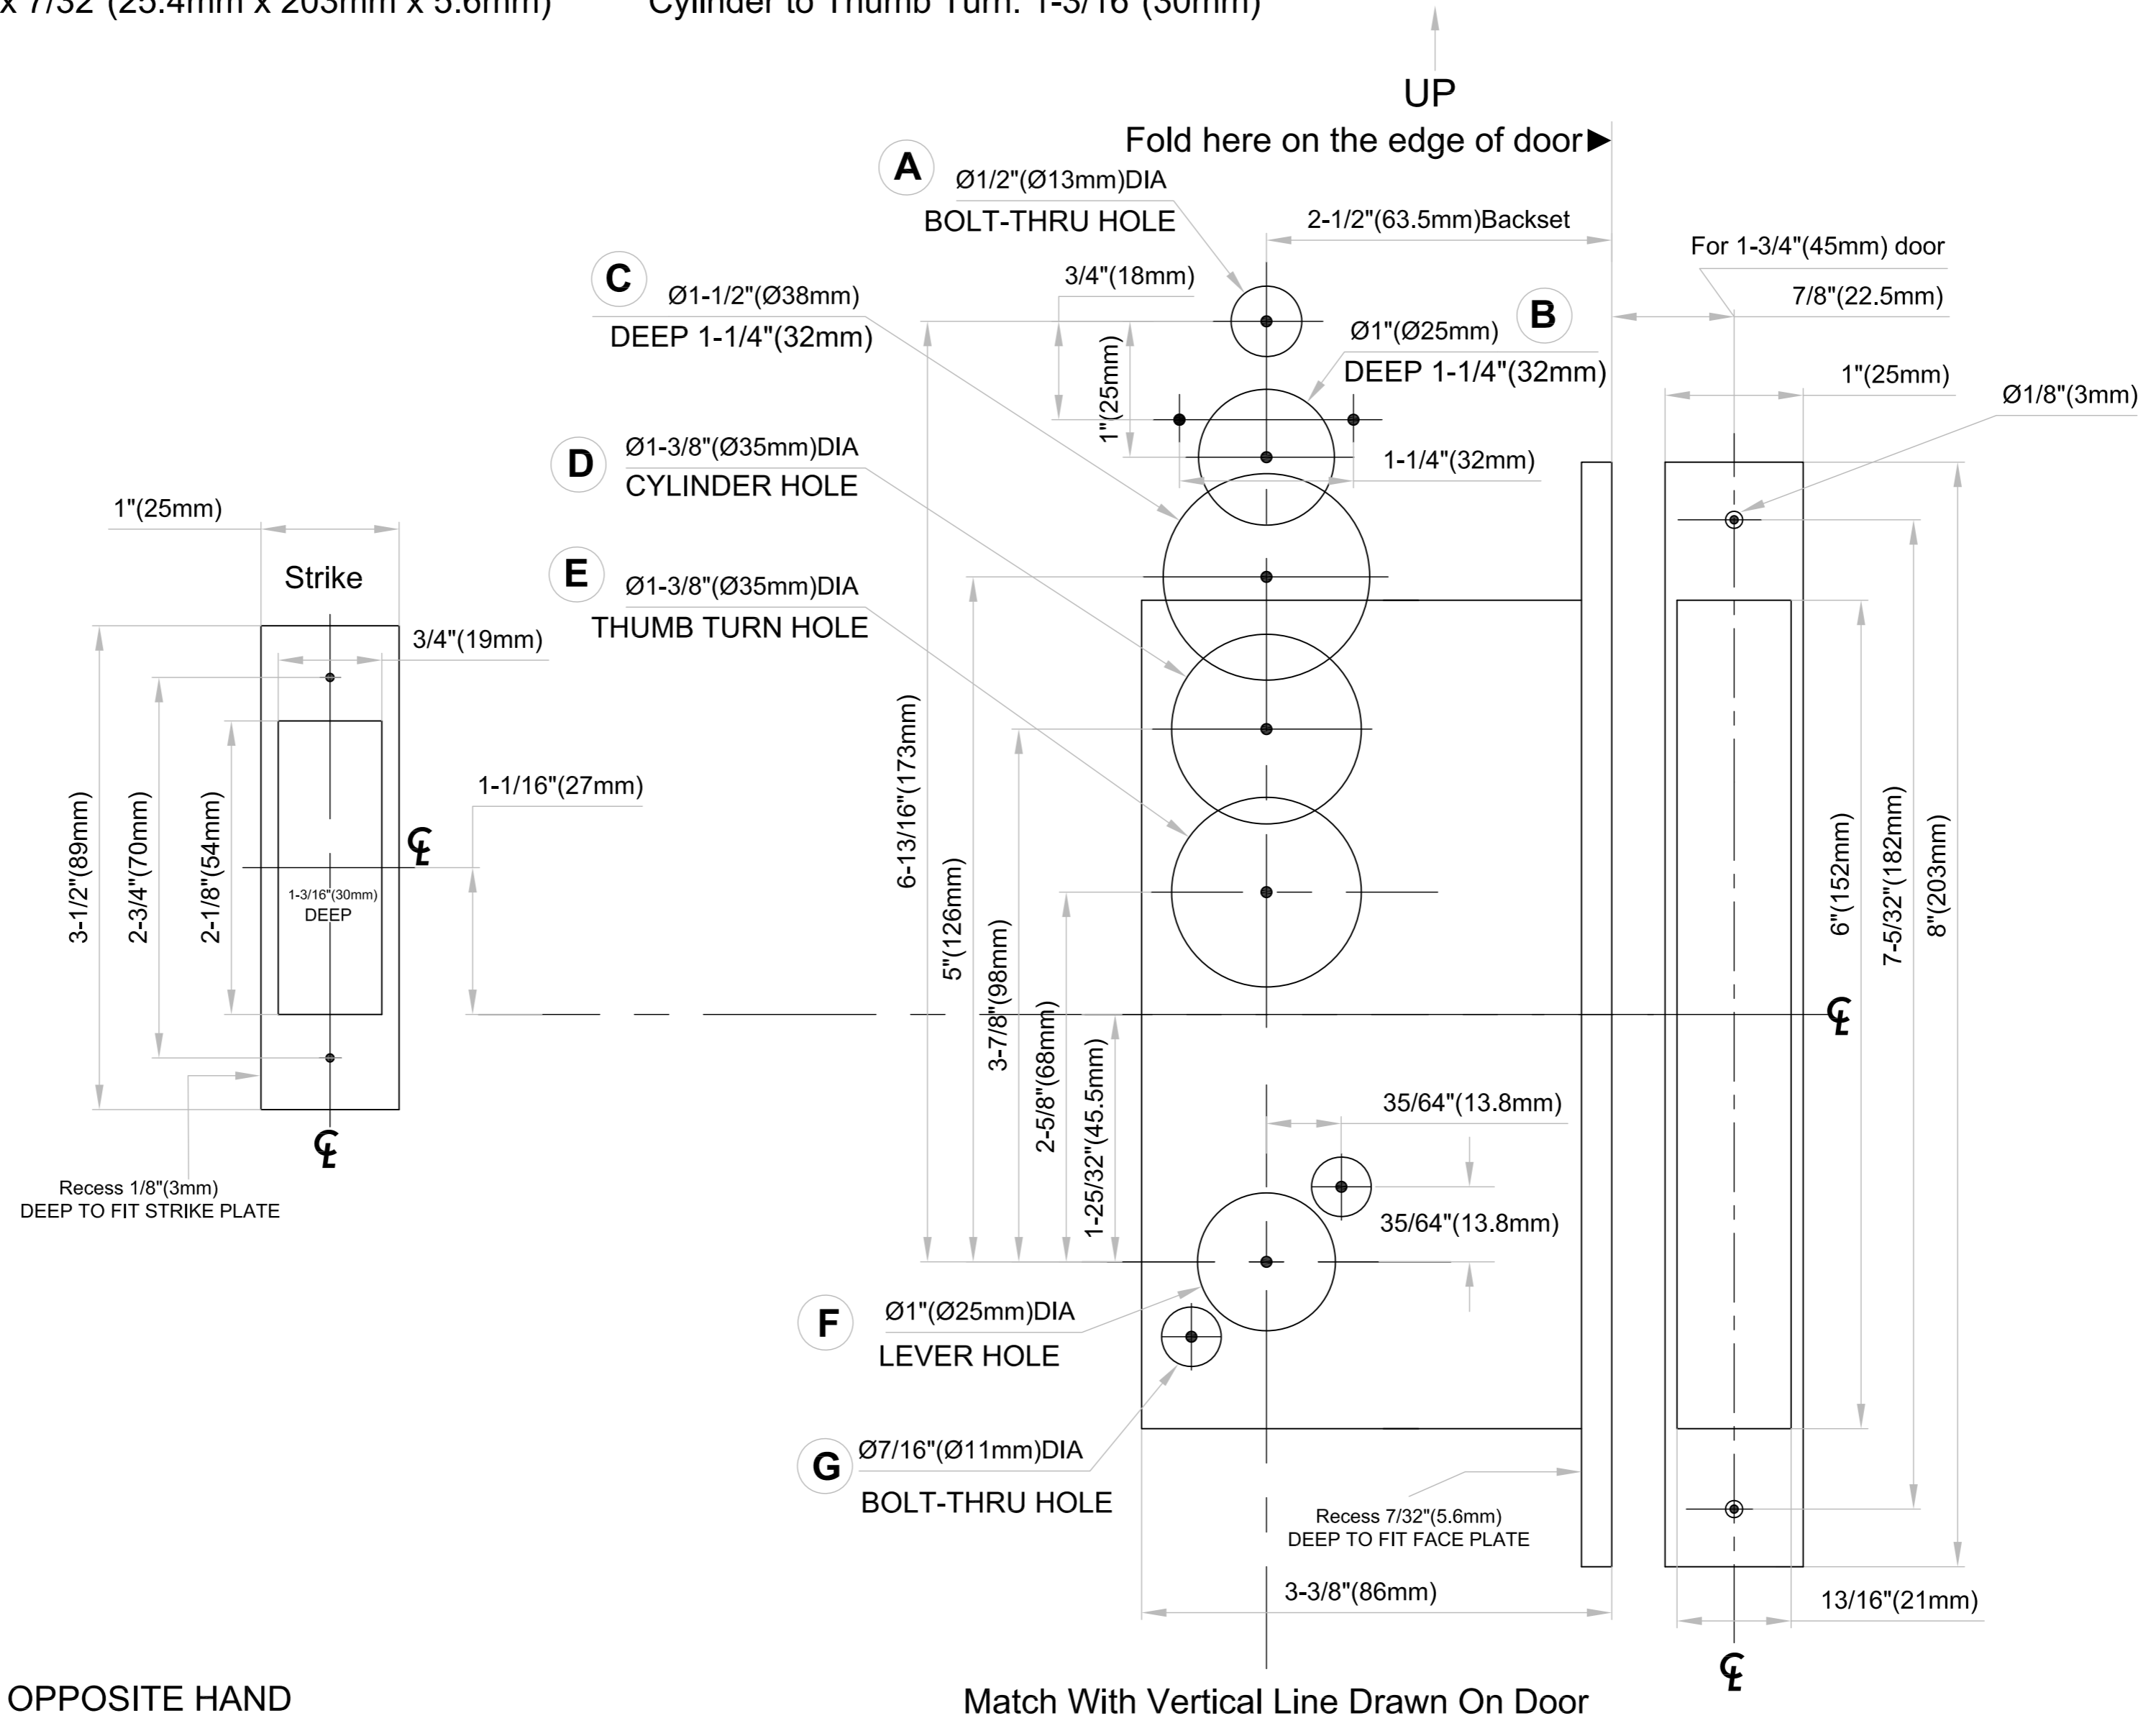

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.