


*** Door Position Sensor (DPS) is optional and must be ordered separately. If not installing DPS please disregard DPS door prep.**

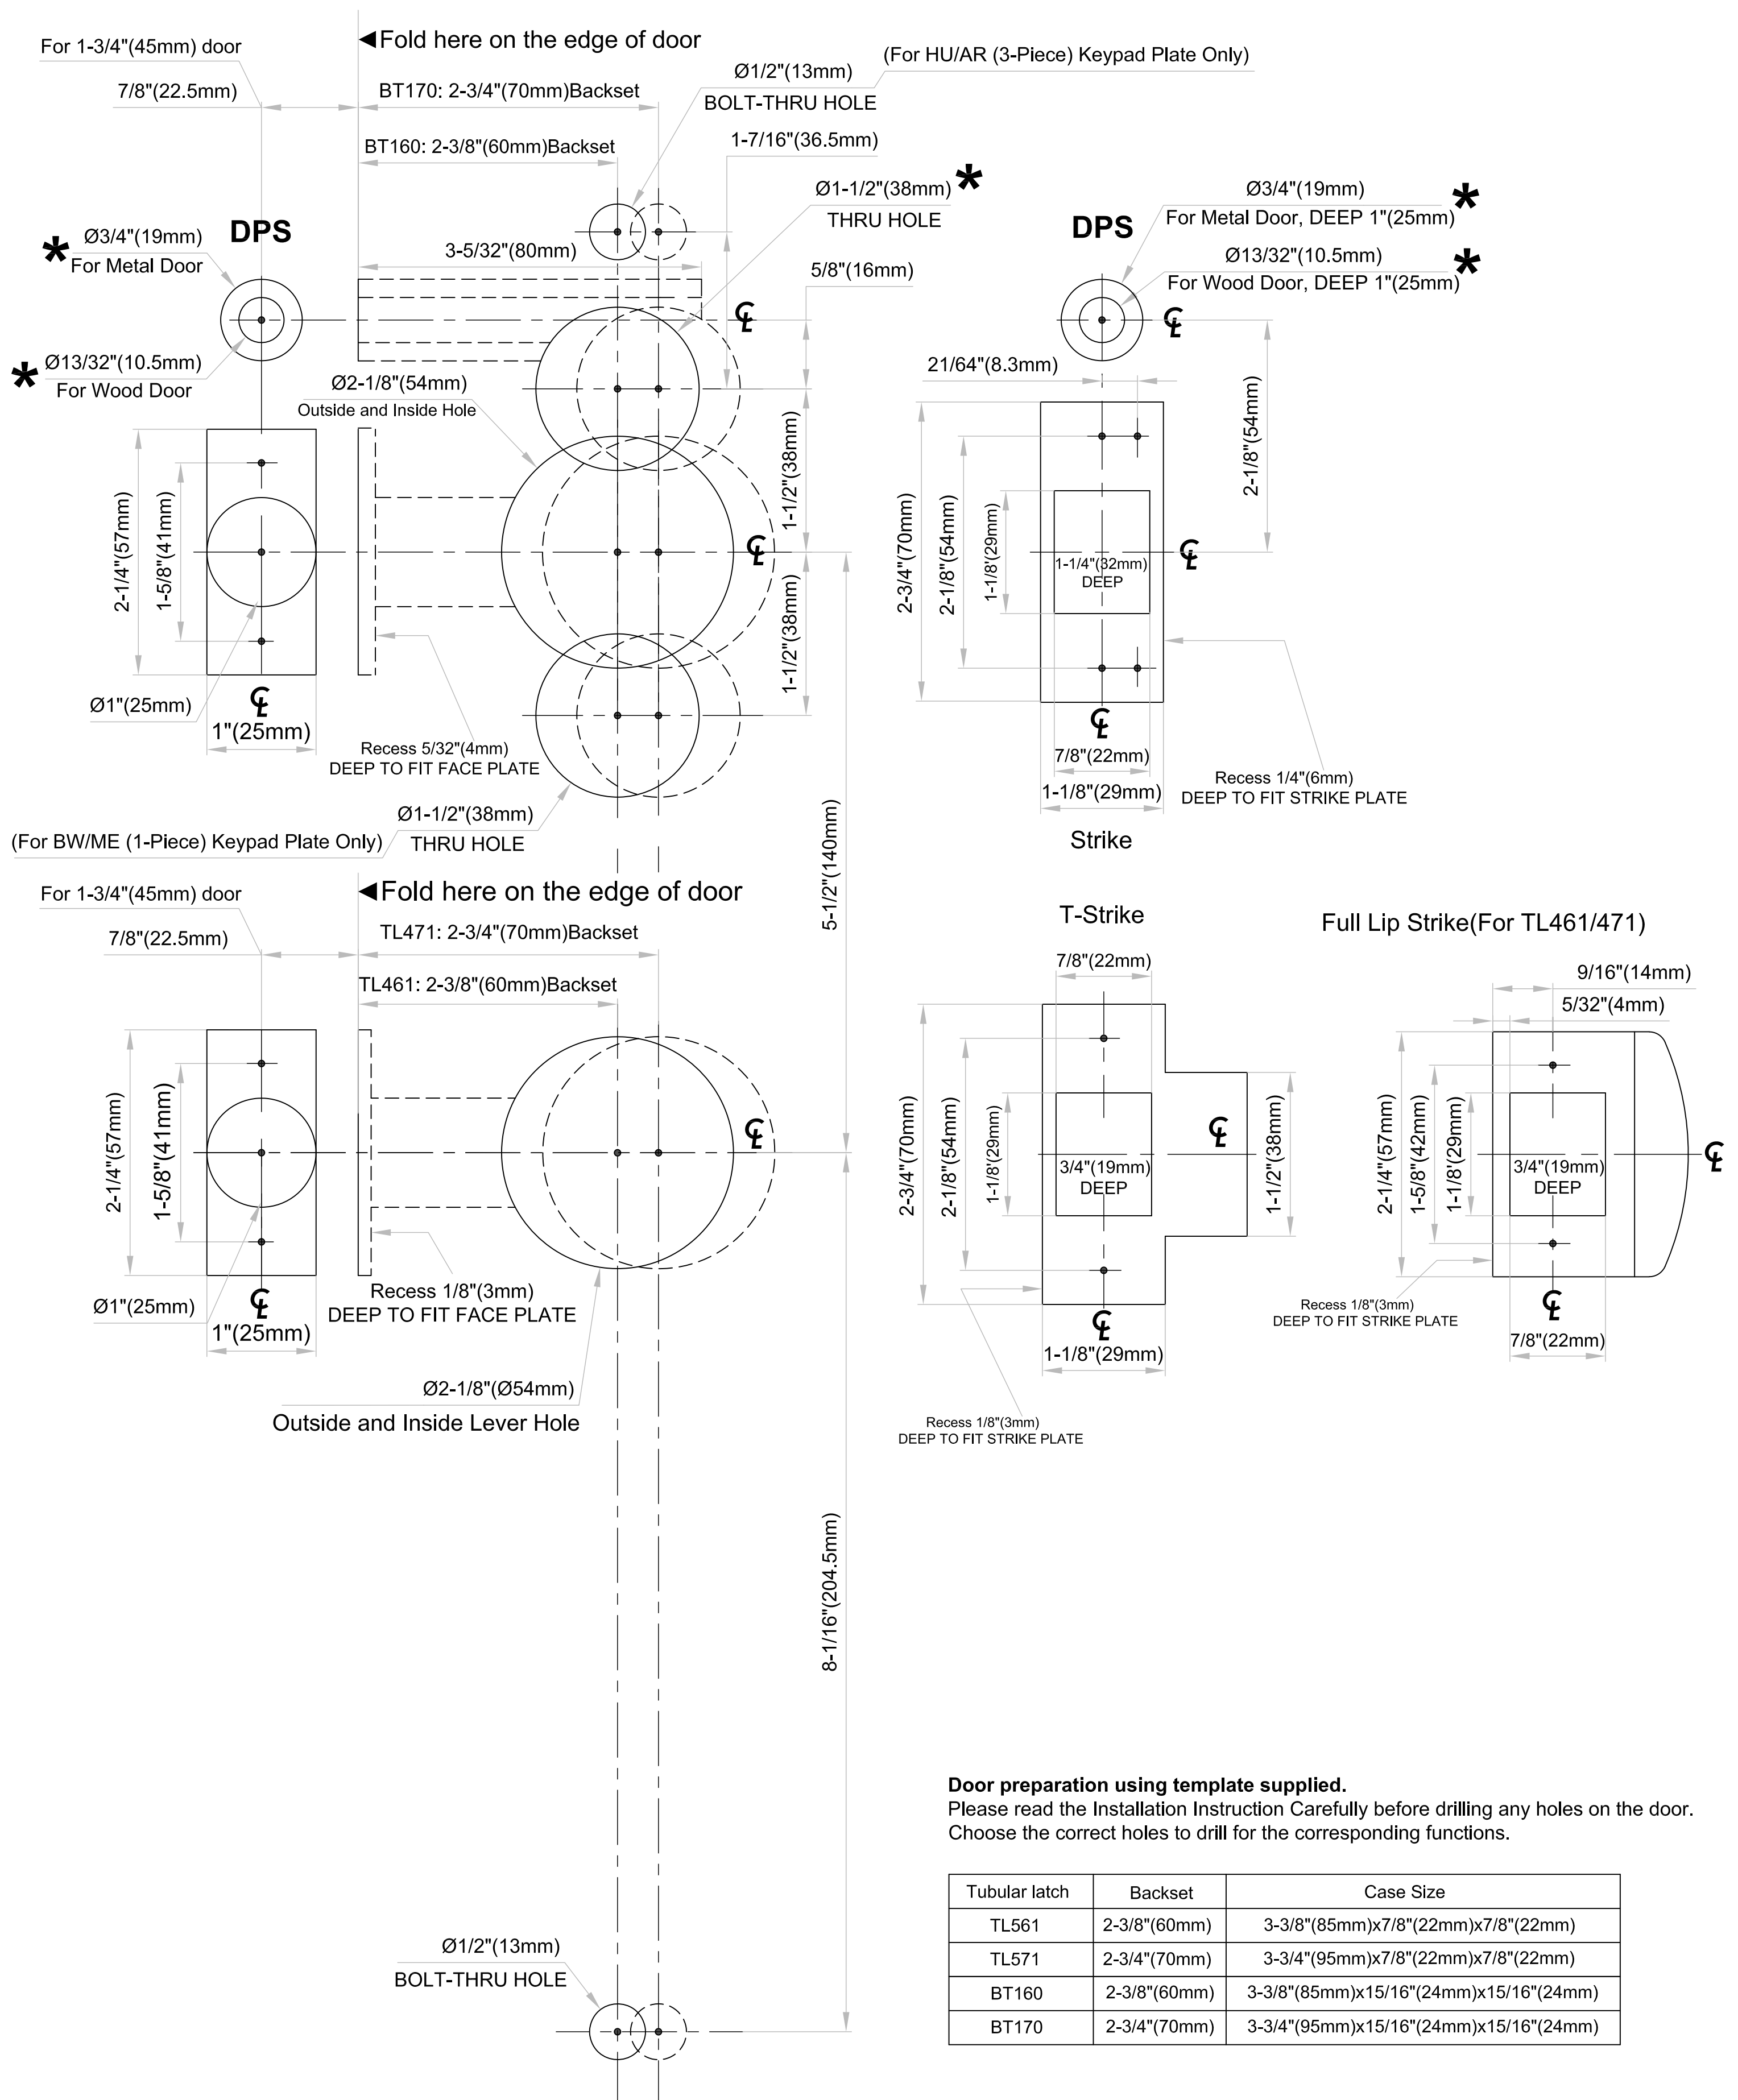

Door preparation using template supplied.
Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Tubular latch	Backset	Case Size
TL561	2-3/8"(60mm)	3-3/8"(85mm)x7/8"(22mm)x7/8"(22mm)
TL571	2-3/4"(70mm)	3-3/4"(95mm)x7/8"(22mm)x7/8"(22mm)
BT160	2-3/8"(60mm)	3-3/8"(85mm)x15/16"(24mm)x15/16"(24mm)
BT170	2-3/4"(70mm)	3-3/4"(95mm)x15/16"(24mm)x15/16"(24mm)

▲ Not Prepping Tubular Latch & Deadbolt Hole for Dummy Function.